



1234 BELLEVUE STREET
GREEN BAY, WI 54302
Phone: 920-468-6828
info@biebelscatering.com
www.biebelscatering.com

BOOYAH/FISH BOIL KETTLE

GENERAL INFORMATION AND INSTRUCTIONS

CLEANING AND CARE INSTRUCTIONS:

- Before you use the kettle: Use a brush and scrub it with hot, soapy water and rinse thoroughly.
- After using the kettle:
 - Using a brush, scrub it with hot soapy water.
 - Make sure the kettle is warm; keep the burner going very low while you clean.
 - Rinse and dry thoroughly.
 - When completely dry, you will need to oil the kettle with any edible oil. (vegetable, corn, olive)

Covers and baskets should be washed and rinsed BUT NOT OILED.

Lighting Instructions:

We recommend the area be clear of children and pets when lighting.

Connect burner to propane tank. Have propane tank as far away as possible from the burner. Make sure that the burner valve is completely turned off. Open the valve on the propane tank, then have your stick lighter lit near the burner as you slowly open the burner valve. If it doesn't light right away, turn it off and give it a few minutes for the propane to clear out and try again.

Do Not Open the Valve Until you are Ready to Light the Burner.

Please follow these directions carefully. Gas build up under the kettle could ignite unexpectedly and combust. If the burner would go out on its own, shut all valves and let gas clear out before attempting to relight.

RETURNING EQUIPMENT:

Return items by 12:00pm the next business day unless other arrangements have been made. When returning equipment to Biebel's, please check in at the service counter before bringing in the equipment. The staff person will tell you what door or area to return the items to. After the kettle has been checked in and noted as cleaned properly, your deposit will be returned to you.