



NACHO CHEESE DISPENSER GENERAL INFORMATION & INSTRUCTIONS

OPERATING INSTRUCTIONS:

(See inside of nacho cheese dispenser cover)

1. Preheat one bag of cheese sauce. This can be done by putting it in the machine for 3 to 4 hours or over night. Otherwise, heat the bag in simmering water for 30 to 45 minutes.
2. Set the preheated bag on its back and remove the cap with the cap opener, your fingers or a bottle opener. Firmly push a serving valve into the spout of the bag and screw down its plastic ring. The spout must be facing away from the center of the bag.
3. Lower the bag through the top of the dispenser with two hands, using one hand to hold the bag along its seam while the other hand guides the valve into place. The valve should be facing downward.
4. Slide valves down so that the edges of the pan fit between the red lines on the valve. Push the valve all the way down to the bottom of the pan.
5. Place the weight on top the first bag. **You can also place a second bag on top instead of the weight so that a new bag will be preheated and ready when the first runs out.**
6. Replace the dispenser lid. Dispense cheese by pushing in on the button.

Once a bag has been opened it must be kept heated or refrigerated.

Sauce is best if used within 5 days in the dispenser.

Unopened shelf life is 12 months.

BAG REPLACEMENT:

1. When sauce flow begins to slow down, remove the top bag or weight and reposition the serving bag so that the sauce is able to be dispense. (Squeeze sauce towards the valve.)
2. When the sauce stops dispensing, take the empty bag out and remove the serving valve. Place the clean valve on the second bag and repeat steps 3-8 in the operating instructions above.

TO CLEAN THE VALVE:

1. Press down on the valve-locking clip using your thumb.
2. Twist the clip and base clockwise and pull the valve apart.
3. Clean each piece.

CLEANING:

1. Unplug the machine and allow it to completely cool.
2. Wipe down the inside and outside of the machine using a warm damp cloth.

RETURNING:

Return the nacho cheese dispenser by 12:00pm the next business day unless other arrangements have been made. When returning equipment to Biebel's, please check in at the service desk.