



---

## SNO-CONE MACHINE (Model Echols#103) GENERAL INFORMATION & INSTRUCTIONS

### ASSEMBLY:

1. Put the aluminum pan under the machine to catch water as the ice melts.

### ELECTRICAL REQUIREMENTS:

- The sno-cone machine requires a properly-grounded 120 volt supply with a 15 amp circuit.
- We recommend the sno-cone machine be plugged directly into a dedicated outlet. Extension cords are not recommended, however, if one is needed make sure at least #12 A.W.G. stranded wire is used. If the cord will be over 25 feet long, use #10 A.W.G. stranded wire.
- Be sure the outlet accepts 3-prong grounded plugs. DO NOT use a 3-prong to 2-prong adapter.

### OPERATING INSTRUCTIONS:

\*\*Connect to properly ground 120 V, 60 Hz power supply.

1. Lift the feed lever and fill the hopper with either cube or chunk ice (3 to 4 inch chunks).
2. Lower the feed lever until it makes contact with the ice.
3. Flip the motor switch to ON.
4. Feed the ice through with light continuous pressure on the feed lever.
5. Once all of the ice in the hopper has been shaved, turn the motor switch to OFF.
6. Raise the feed lever and refill with ice to continue making shaved ice.
7. Scoop the shaved ice into the cone cups and add flavored syrup.

### SHOULD THE MACHINE CHOKE UP:

1. Turn the motor switch off immediately and disconnect the power cord from the electric circuit to avoid damage to the motor.
2. Be sure to clear the machine of all ice before starting the motor again.

### CLEANING:

3. After the unit has been unplugged and allowed to cool, remove all ice from the shaver and the storage compartment.
4. Using a clean cloth, wipe down:
  - a. The inner surface of the shaver hopper (caution the cutting head has two exposed cutting blades)
  - b. The outside surface of the shaver casting and the plunger.
  - c. All interior and exterior surfaces.
5. To clean the water collection tray:
  - a. Tilt tray to drain the water trapped in the drain cavity.
  - b. Slip the drain hose off the nipple fitting.
  - c. Lift the tray out of the cabinet.

### RETURNING:

Return the sno-cone machine by 12:00pm the next business day unless other arrangements have been made. When returning equipment to Biebel's, please check in at the service counter before bringing in the equipment. The staff person will tell you what door or area to return the items to.